

eWON4005CD™

**VPN (Virtual Private Network)
Ethernet Gateway
Remote Access Server (RAS)
Programmable Industrial Router (PIR)**

Installation Guide

Rev. 1.0



*Cool
Internet
Telecontrol
Solutions*

1 Product description	4
1.1 Introduction	4
1.2 General specification of the hardware platform	4
1.3 Functions of the eWON4005CD™	4
1.3.1 General.....	4
1.3.2 Virtual Private Network.....	4
1.3.3 Remote Access Server functions	4
1.3.4 Ethernet to Serial Gateways.....	5
1.3.5 Programmable Industrial Router functions	5
1.3.6 Datalogger.....	5
1.4 Typical applications	5
1.5 Part Numbers and internal options	6
2 eWON technical documentation.....	7
3 Housing and markings	8
3.1 Housing Interfaces	8
3.2 Markings	9
3.3 Applicable directives, standards and compliance	9
3.4 Equipment information and versions	10
3.5 Mechanical outline	11
3.6 Mounting and environmental conditions	12
3.7 Preparing the installation	12
3.8 Specification for external power supply selection	12
3.8.1 Auto fuse	13
4 Front panel control LEDs	13
5 Specifications of communication interfaces and I/Os	14
5.1 Ethernet Ports.....	14
5.2 Embedded PSTN Modem (optional).....	14
5.3 Embedded quad band GSM/GPRS Modem (optional)	14
5.4 Embedded quad band EDGE Modem (optional)	15
5.4.1 SIM-card installation.....	15
5.5 Embedded ISDN Modem (optional)	15
5.6 Configurable serial port.....	16
5.7 MPI port	17
5.8 Digital input	17
5.9 Digital output.....	18
6 IP parameters configuration	19
6.1 Resets.....	20
6.1.1 User Reset	20
6.1.2 Factory Reset.....	20
7 Technical support.....	21

eWON4005CD™

8 Appendix: Pinouts and connections.....	21
8.1 Power Supply.....	21
8.2 Ethernet	22
8.2.1 Ethernet LAN.....	22
8.2.2 Ethernet WAN	22
8.2.3 Direct connection.....	23
8.2.4 Connection over hub/router.....	24
8.3 RJ45 connector.....	25
8.4 Input/Outputs	26
8.5 Serial Port	27
8.6 MPI port	28
8.7 PSTN / ISDN phone line connector	29

1 Product description

1.1 Introduction

The eWON4005CD™ is the **Compact Design** evolution of the eWON4005™.

The eWON4005CD™ is the *Industrial LAN/Modem Router* version of a complete range of Ethernet/Internet gateways also known as “Programmable Industrial Routers” (PIR). See our web site <http://www.ewon.biz> to get further information about the eWON range. The eWON is a terminal that enables access to technical data, whatever their format is. It is configurable by web pages. It is secure because it meets the toughest industrial standards and has restricted access features (required in open networks).

The eWON4005CD™ can optionally embed a modem (PSTN, GSM/GPRS/EDGE or ISDN).

The eWON range supports the TCP/IP and PPP protocols. This brings you all the benefits of an universally recognized standard network. It also allows you to use popular software tools like Internet Explorer, FTP client, SNMP Manager, Mail Recipient ... and so to reduce significantly your costs (implementation and ownership).

1.2 General specification of the hardware platform

- Processor ARM clocked @ 75Mhz, 16Mb SDRAM, 32Mb Flash
- Backed up real time clock (RTC) with 24 Hours autonomy
- Battery with 10 years autonomy (for RTC)
- External power supply 12-24 VDC +/- 20%, consumption: 10W max
- 1 Ethernet port 10/100Mb BaseTx
- 1 Ethernet switch with 4 ports 10/100Mb BaseTx
- 1 Serial port isolated configurable in RS232/RS422/RS485
OR
1 MPI port (up to 12 Mbits/sec)
- 1 digital input (DI)
- 1 digital output (DO)
- DIN rail mounting compliant with EN50022 (latch)
- Environmental conditions (operating):
Ambient T°: from 0°C to +50°C
Humidity: from 0 to 80% non condensing

1.3 Functions of the eWON4005CD™

1.3.1 General

- Ethernet Gateway to serial protocols
- Data acquisition
- Web server – fully customizable web pages
- viewON compatible (optional)
- Programmable by BASIC scripts
- Alarm management
- Report generation

1.3.2 Virtual Private Network

- Allow to build your own Virtual Private Network (VPN) thanks to OpenVPN technology

1.3.3 Remote Access Server functions

- Remote Access Server (RAS) and TCP/IP Server
- PAP/CHAP Authentication
- Login/password
- Remote network access
- User access control
- Security: NAT, IP filtering
- Conventional and internet callback

1.3.4 Ethernet to Serial Gateways

- MODBUS TCP to MODBUS RTU
- XIP to UNITELWAY
- EtherNet/IP™ to DF1
- FINS TCP to FINS Hostlink
- ISOTCP to PPI (optionnaly MPI)
- VCOM / ASCII

1.3.5 Programmable Industrial Router functions

- Automatic routing of protocols
- Programmable routing from I/O and Tag names (BASIC)

1.3.6 Datalogger

- Internal cyclic database - up to 139264 points
- Export of data in binary or text format, by FTP or as an Email attachment

1.4 Typical applications

- Alarm management
- Sending alarms by network, phone, Email and/or SMS
- Remote measurements, loop back, control and monitoring
- Local or remote Human Machine Interface (SCADA)
- Predictive and operational maintenance
- Diagnosis and machinery status control
- Stock and vessel level monitoring
- Process and machinery activity logs
- Commissioning support
- Remote programming
- Interface for Application Service Providers (ASP)
- Datalogging

1.5 Part Numbers and internal options

Part Number structure of the eWON product range:

EWaabzm[-x]

Where:

aa = Type of hardware platform

- 46 = eWON4005CD™

b = Power supply

- 2 = Low voltage 12-24DC power supply

z = Serial Port type

- 0 = RS232 / RS422 / RS485 serial port
- 6 = MPI port

m= Modem

- 1 = No modem (Ethernet only)
- 3 = ISDN EU modem
- 4 = PSTN 56k modem
- 7 = EDGE quad band
- 8 = GPRS quad band

-x

- 6 = without viewON extension

Examples of Part Numbers for the eWON4005CD™ platform:

Type/Description	Part Number
eWON4005CD™/Ethernet only (No modem)	EW46201
eWON4005CD™/ISDN (ISDN modem)	EW46203
eWON4005CD™/PSTN 56 (PSTN 56 modem)	EW46204
eWON4005CD™/GSM/GPRS (GSM/GPRS modem)	EW46208
eWON4005CD™/EDGE (EDGE modem)	EW46207
eWON4005CD™-MPI/PSTN 56 (PSTN 56 modem)	EW46264
eWON4005CD™/EDGE without viewON	EW46207-6

Table 1: Examples of Part Numbers

2 eWON technical documentation

The eWON technical documentation is structured in 4 different levels as shown in the table below:

Level	Title	Contents
1	Hardware Installation Guide <i>(the present document)</i>	Detailed description of the hardware platform, of its interfaces, available options. Hardware specifications, conformity to standards. Installation recommendations and pinout of the connectors. Exists for each eWON type.
2	Software Reference Guides	Exhaustive reference guides to use all advanced functions of the eWON. <ul style="list-style-type: none"> • General Reference Guide (RG-001) • Programming Guide (RG-002) • Web reference guide (RG-003)
3	Application User Guides	Guides covering one application topic. For examples: <ul style="list-style-type: none"> • eWON Getting Started • eWON MPI-Teleservice • Unitelway topology Gateway XIP • ...
4	Knowledge Base	Small document about one technical topic. For examples: <ul style="list-style-type: none"> • How to do a PING function with Basic • eWON serial number structure • eWON modem type • ...

Table 2: eWON technical documentation different levels

All those manuals are available for download in pdf format on the eWON website: <http://support.ewon.biz>.

3 Housing and markings

3.1 Housing Interfaces

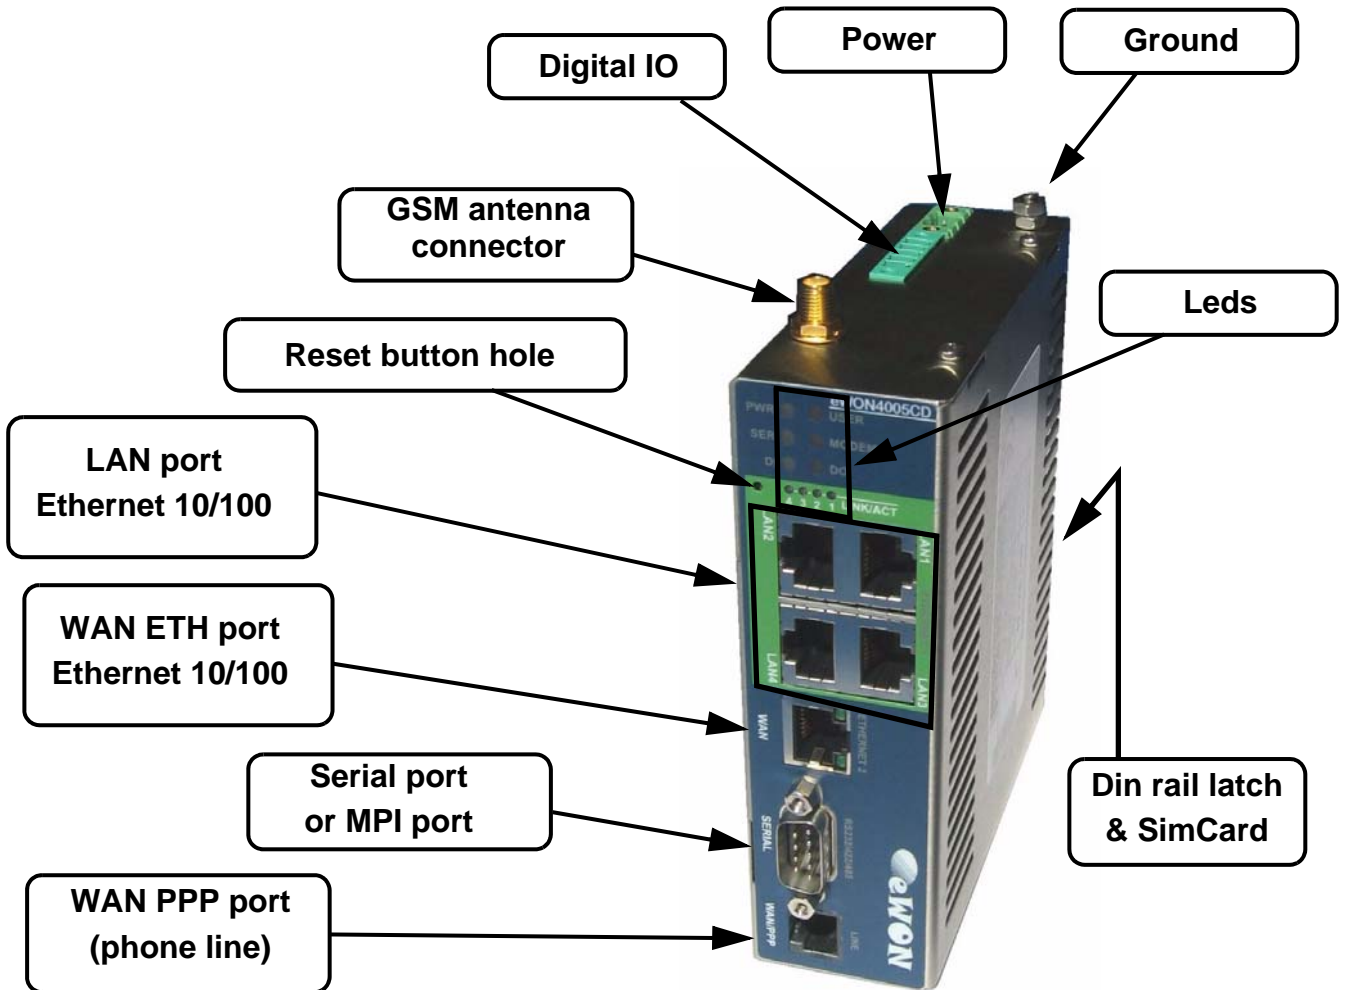


Figure 1: Housing

3.2 Markings

The identification label of the eWON is placed at the left hand side of the housing. The label is composed of the following fields:

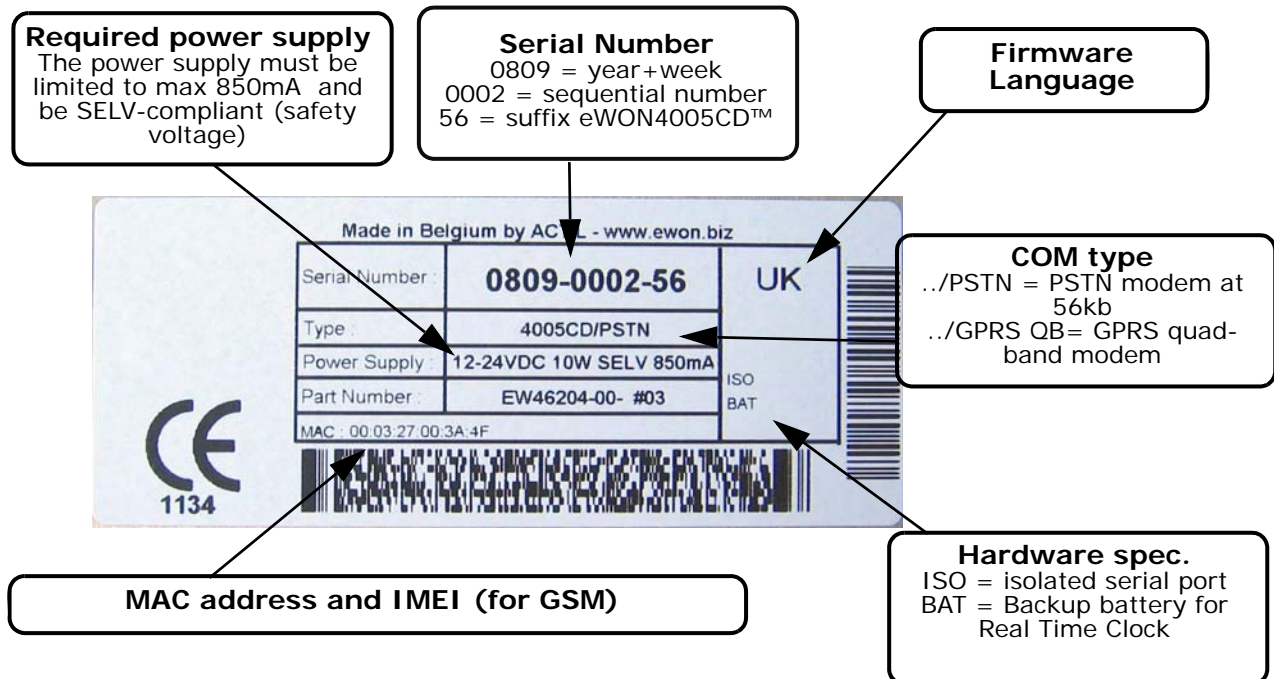


Figure 2: eWON Label

The eWON Serial Number (SN) is an important traceability tool both for the user and for the manufacturer. Therefore, next to the product label, each eWON has its serial number stored in the flash memory. This SN is also used in order to scan the network for eWONs and to assign its IP address, subnet mask and gateway. For more details, [See "Equipment information and versions" on page 10.](#)

3.3 Applicable directives, standards and compliance

- 93/68/EEC European directive for CE-mark
- 73/23/EEC European directive for the safety of low voltage equipment (LVD) – Applicable standard is EN60950 A1+A4+A11
- 89/336/EEC amended by 92/31/EEC European directives for the electromagnetic compatibility (EMC) – Applicable standards EN55022:94 A1, A2 (emissions) and EN55024:98 (immunity)
- UL/CSA certification in progress (UL60950)
- Vibrations and climatic tests (IEC 60068-2-1, IEC 60068-2-2, IEC 60068-2-14, IEC 60068-2-30, IEC 60068-2-29, IEC 60068-2-64)

3.4 Equipment information and versions

The eWON hardware and software revisions can be checked with a web browser on the eWON server. Once logged onto the eWON, clicking on the eWON logo shows these revisions.

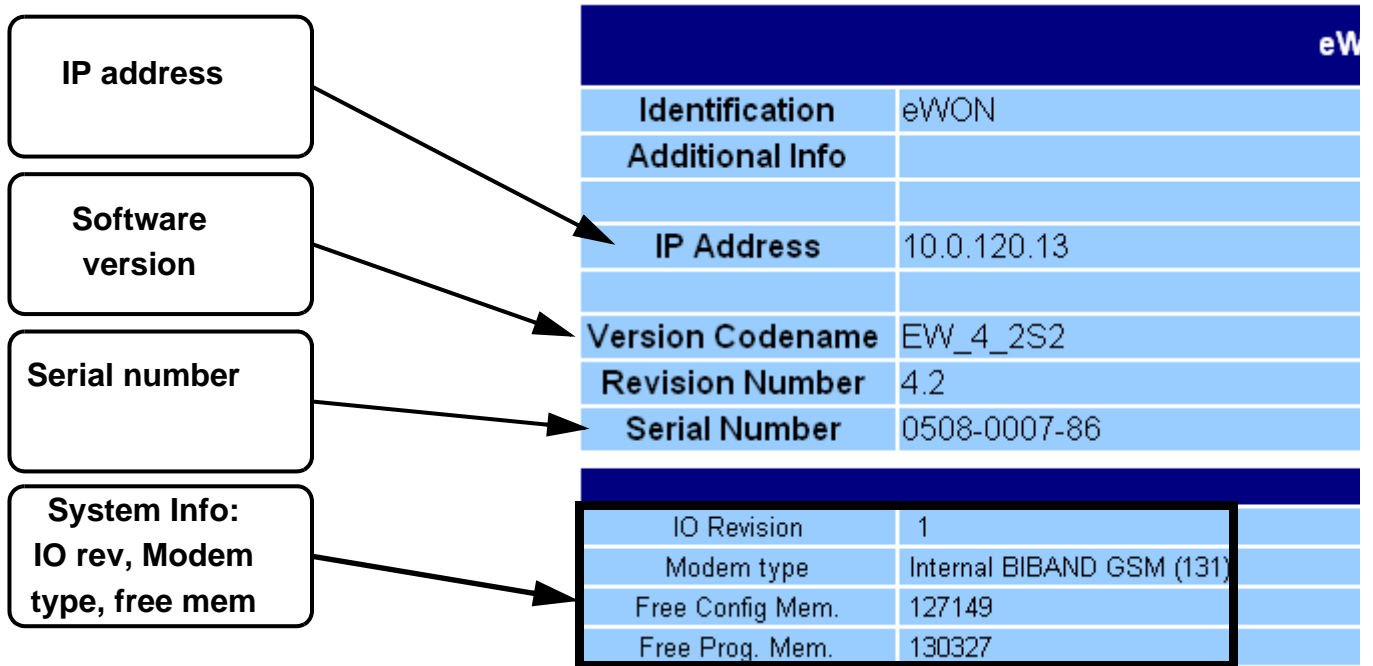


Figure 3: eWON info page details

3.5 Mechanical outline

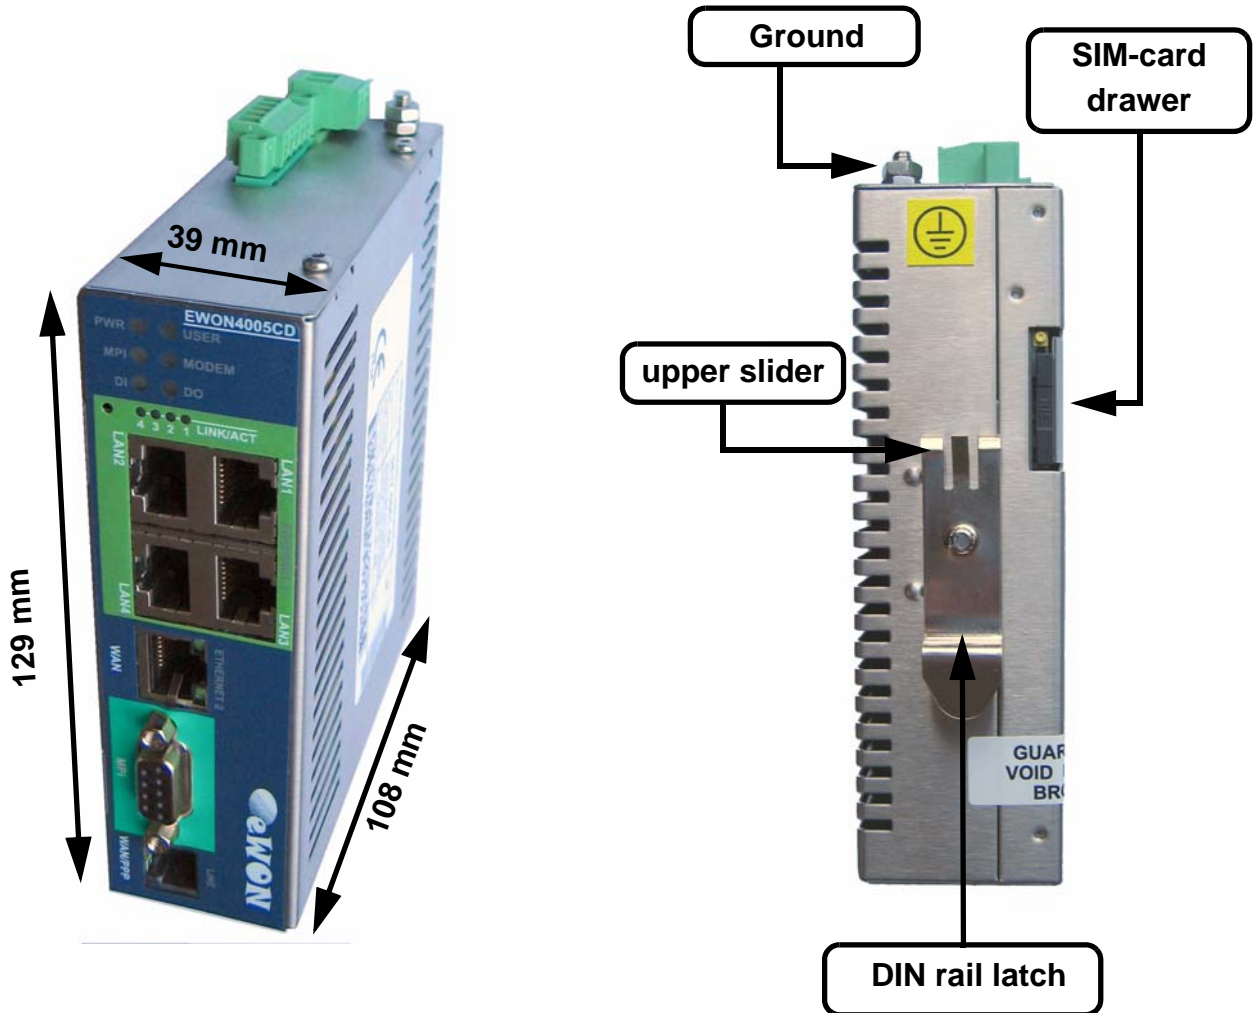


Figure 4: Left: Mechanical Outline - Right: DIN-rail latch

The eWON must be fastened on a 35mm DIN rail compliant with EN50022.

To put the unit in place, insert the upper slider into the upper part of the rail, with the eWON™ tilted around 20°.

Then push and rotate the eWON™ downward to put the unit right.

The eWON4005CD™ is now safely fastened.

3.6 Mounting and environmental conditions

The eWON unit has an IP31 protection grade. It is therefore not suited for outdoor mounting. The design of the unit is such that it has to be integrated in an enclosed electrical cabinet, protected from excessive heat, humidity and dust. The eWON4005CD™ is complying to the CE-marking requirements regarding electromagnetic compatibility (EMC) within an industrial environment.

The normal mounting position is wall mounted on DIN-rail (EN 50022). The unit is suited to work in any other position.

The equipment will operate within specified tolerances only if the following environmental conditions are respected:

Ambient temperature range	0°C to +50°C
Ambient humidity	0-80% non-condensing

3.7 Preparing the installation

The recommended free space in the cabinet for the eWON should be at least: 80-mm wide x 200-mm high x 160-mm deep (terminal block excluded). A piece of rigid DIN-rail profile (flat 35mm wide) of suitable length should be firmly fastened, horizontally, in the middle of the area.

Grounding the eWON is necessary to eliminate unwanted transients (lightning protection) and to conform to the EMC requirements. Therefore, a ground screw is available at the top of the unit. Connect this screw directly to a low impedance ground.

3.8 Specification for external power supply selection

The eWON4005CD™ has to be supplied by an external voltage source ranging from 12 to 24 VDC. The power supplied must be a Class 2 or Level 3, SELV-compliant (security voltage) and limited in current to a max of 850mA. The safety voltage power supply is not part of the delivery. The data given below is intended to allow correct selection of the external power supply.

Specification	Value
Secondary PS voltage	from 12 to 24 VDC +/-20% (SELV-compliant)
Max secondary PS current	850 mA max.
eWON current protection	2A by auto fuse
eWON voltage protection	30V by transil
eWON EMI filter	Common mode filter (*)
Power absorbed	10 Watts

Table 3: Specification for external power supply selection

(*) Properly ground the unit with the earth screw at the top of the unit. This is mandatory to ensure the security and the electro mechanical compatibility (EMC) of the device.

Equipment Supplied by Class 2 or Level 3 Power Supply.

3.8.1 Auto fuse

An auto fuse placed just after the power input protects the eWON devices against short circuits. This component returns by itself to its normal state when the short circuit has disappeared and after the component has been cooling down. Would this fuse happen to operate, please check the device for presence of loose metal parts inside likely to generate a short circuit. If the problem recurs even after such a verification, then return the device to the vendor for further investigation.

4 Front panel control LEDs

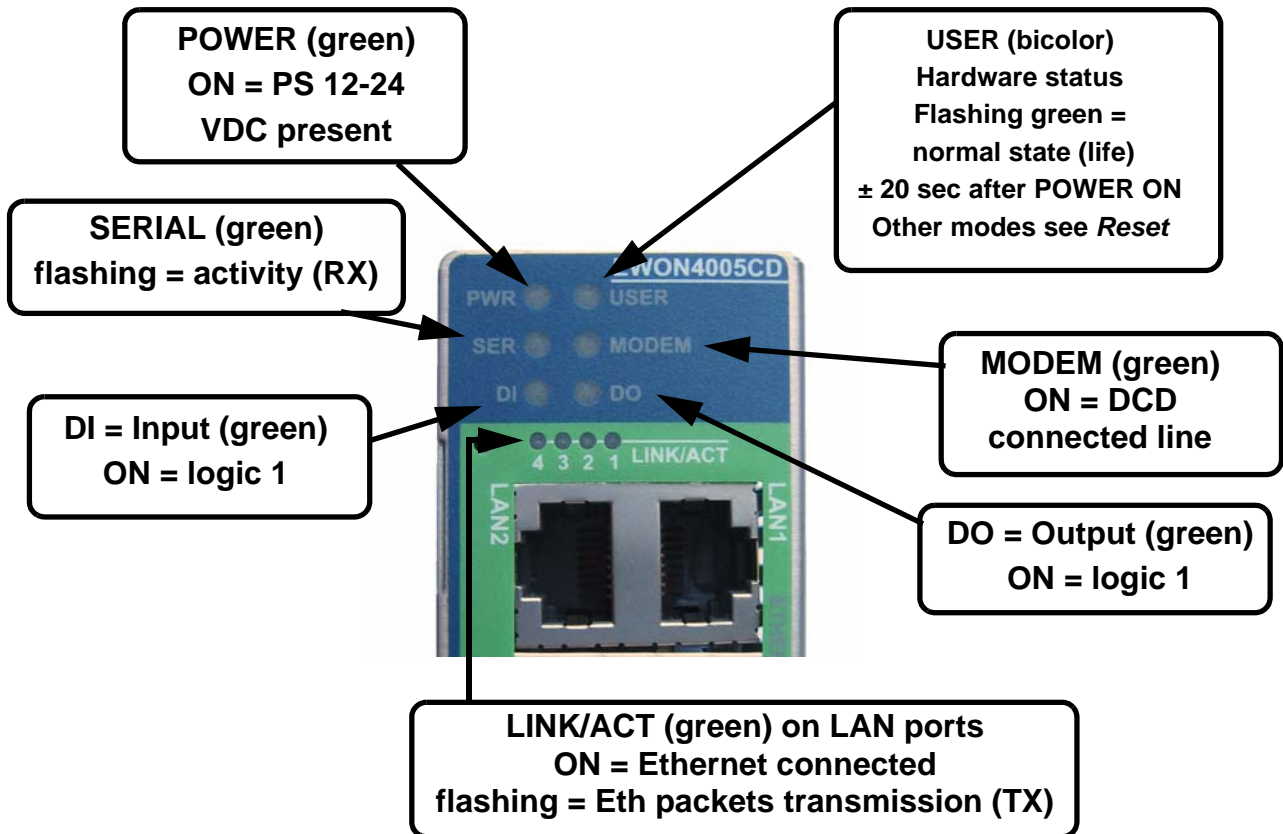


Figure 5: Front Panel leds description

5 Specifications of communication interfaces and I/Os

5.1 Ethernet Ports

The eWON4005CD™ has 2 ethernet interfaces:

- a LAN (Local Area Network) with an integrated 4 ports switch
- a WAN (Wide Area Network) with one port

Specification	Value
Applicable standard	10/100BaseTX
Isolation	1,5 kV
Pinout RJ45 connector	See label and appendix (<i>RJ45 connector on page 25</i>)

Table 4: Ethernet ports specification

Please refer to the appendix (Direct connection on page 23 and Connection over hub/router on page 24) for information on the different Ethernet connexion modes (straight and crossed cables).

5.2 Embedded PSTN Modem (optional)

Specification	PSTN 56k
Max baud rate	(V92) 56.000 bps
Compliant to standards	47 CFR part 68 (USA) CTR-21 (EUR)
Approved by	TÜV Rheinland USA
Certificate number	AU7MD01BMC56
Pinout phone line connector	See label and appendix (PSTN / ISDN phone line connector on page 29)
Leased Line mode	No

Table 5: PSTN modem specification

5.3 Embedded quad band GSM/GPRS Modem (optional)

Specification	GSM/GPRS
Bands	Quad band EGSM 900/1800/850/1900 MHz
GPRS Class	Class 10
Max baud rate	80 kbps (theoretical)
Compliant to standards	R&TTE + GCF
Certificate number	---
Antenna connector	Type SMA-F

Table 6: GSM/GPRS modem specification

5.4 Embedded quad band EDGE Modem (optional)

Specification	EDGE
Bands	Quad band EDGE 900/1800/850/1900 MHz
E-GPRS Class	Class 10
Max baud rate	115 kbps (theoretical)
Compliant to standards	R&TTE + GCF
Certificate number	---
Antenna connector	Type SMA-F

Table 7: EDGE modem specification

5.4.1 SIM-card installation

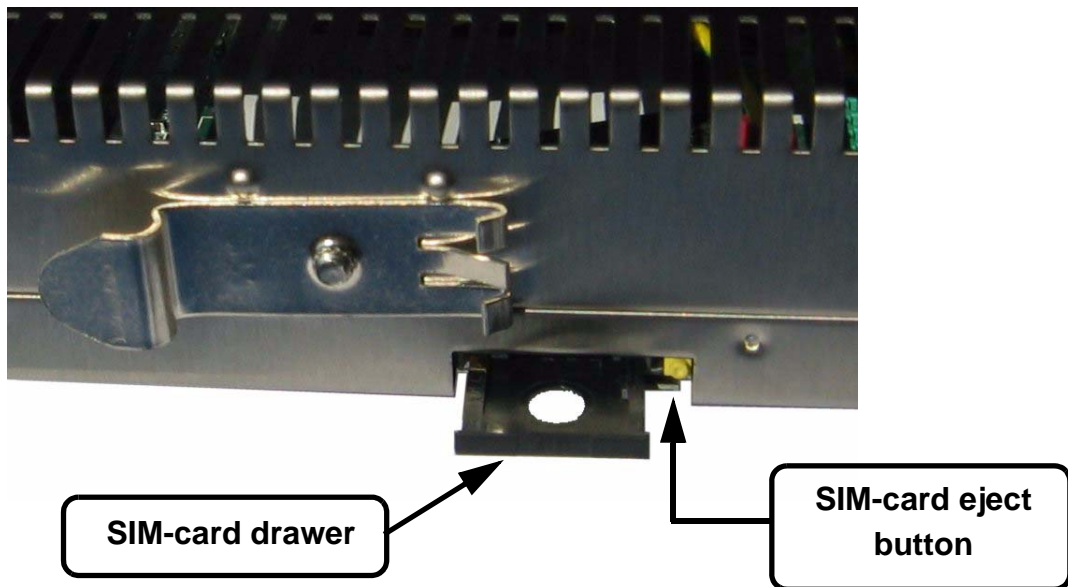


Figure 6: SIM-card insertion

5.5 Embedded ISDN Modem (optional)

Specification	Value
ISDN specification	ISDN BRI S0.1.430
Type	1B+D
Max baud rate	64 Kb
Certification	---

Table 8: ISDN modem specification

5.6 Configurable serial port

Specification	Value
Physical modes (configurable)	RS232/RS485/RS422
Isolation	1 kV by optocoupler
Pinout connector	See label and appendix (<i>Serial Port on page 27</i>)

Table 9: Serial port specification

The configuration of the physical serial mode is done by a set of 4 dip switches located on left side of the unit.



The settings of the switches are shown in the table below (note: switch 1 is the right one).




Positions	Mode
4 3 2 1 OFF  ON	RS232
4 3 2 1 OFF  ON	RS422, RS485 WITHOUT polarisation and termination resistor
4 3 2 1 OFF  ON	RS422, RS485 WITH polarisation and termination resistor

Table 10: Serial mode configuration switches

Note: the 3 switch configurations shown here above are the sole configurations giving satisfactory results.

Warning: The switch 2 is reserved and must stay OFF.

Note that switch 3 & 4 need to have the same position (both ON or both OFF). When they are ON, it connects the internal polarisation (typ 680 Ohms) and termination (typ 120 Ohms) resistors. This configuration applies only to RS485/RS422 lines conforming to good practices.

5.7 MPI port

The MPI port is easily identifiable with its light blue square surrounding a female DB9 connector.

Specification	Value
Physical mode	MPI
Speed	<ul style="list-style-type: none"> • 19.2 kBauds • 187.5 kBauds • 1.5 MBauds • 3.0 MBauds • 6.0 MBauds • 12.0 MBauds
Polarisation	100 kOhms
Termination	-
Pinout connector	See label and appendix (MPI port on page 28)



5.8 Digital input

Specification	Value
Input voltage range	0 to 24 VDC
Input voltage absolute max (varistor protection)	33 VDC
Zero state max input voltage (OFF)	5 VDC
One state voltage range (ON)	10 to 30 VDC
One state currents (ON)	3.8mA @ 12VDC 8.2mA @ 24VDC
Isolation	3,5 kV
Pinout connector	See label and appendix (Input/Outputs on page 26)

Table 11: Specification of the digital input

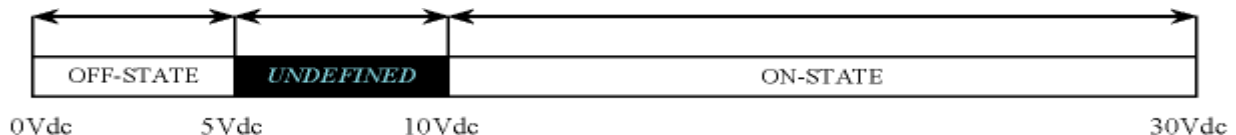


Figure 7: Digital input: state vs voltage

The input range extends from 0 to 24VDC (30VDC max). A zero logic (OFF) state is detected when the input level is below 5Vdc. A one logic (ON) state is detected when the input level is above 10Vdc.

Warning: the logic level is undefined when the input is ranging between 5 and 10VDC.

5.9 Digital output

Specification	Value
Type of output	Open drain (MOSFET)
Max current (external source)	200mA @ 30 VDC
Isolation	3,5 kV
Pinout connector	See label and appendix (<i>Input/Outputs on page 26</i>)

Table 12: Specification of the digital output

This digital output is activated by an open drain MOSFET transistor driven by an optocoupler. The maximum current flow into this transistor has a characteristic above the value specified in the eWON, in order to cope with the switching power losses. The transistor used is in an open drain type with pre drive. This means the relay power supply has to be supplied from an external source to the pre drive electronics.

The diagram below shows the external wiring needed for correct operation of the digital output. A relay has been chosen for this sample application but any load within the specifications can be used instead.

Warning: note that this is a sink only output to ground (the transistor acts like a switch to ground).

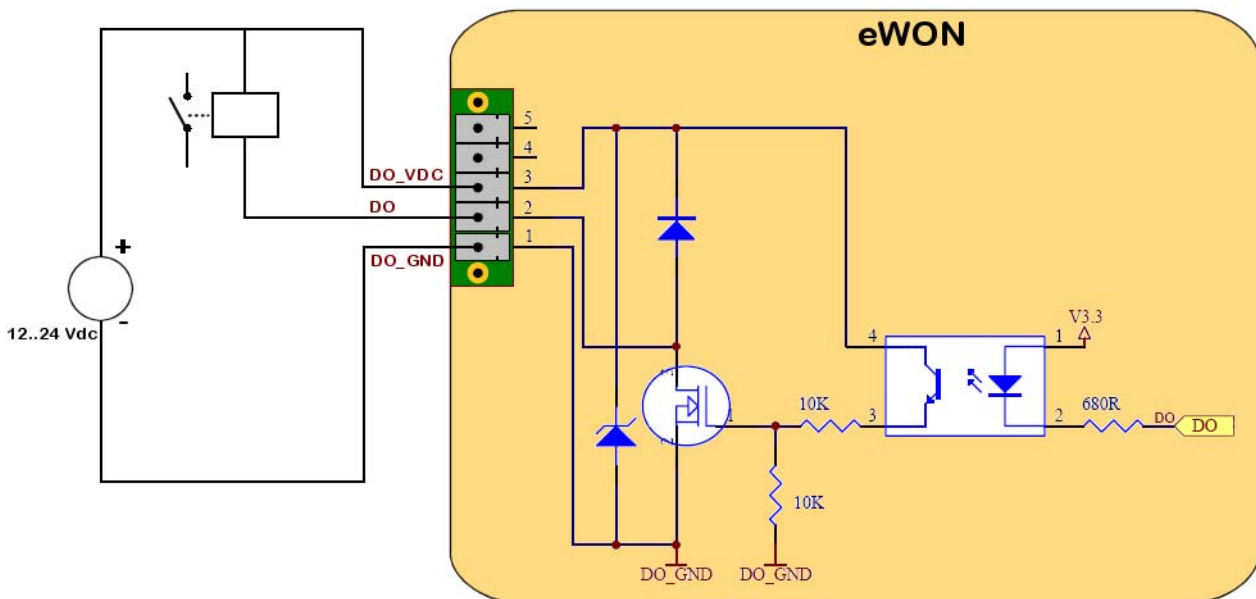


Figure 8: Digital output: wiring diagram

6 IP parameters configuration

Warning: normally you cannot communicate with a device of which you don't know the IP parameters. Therefore, there is a special tool (called "eBuddy") you can download from the eWON Internet site <http://www.ewon.biz>. Start this application once you have connected your eWON to the network. The application will scan the whole network and will identify all eWONs that are connected, including their IP parameters (Address and subnet mask) and their serial number. The utility allows also to edit the IP parameters. IP parameters always have to be defined in full agreement with network policies applicable within your organisation (ask your network administrator).

Default settings:

LAN interface	
IP address	10.0.0.53
Subnet mask	255.255.255.0

Table 13: LAN IP factory config

WAN interface	
IP address	10.1.0.53
Subnet mask	255.255.255.0
Gateway	0.0.0.0

Table 14: WAN IP factory config

WARNING: By default, the WAN interface is disabled.
Then, first connection must be done by the LAN.


Modem interface (incoming PPP)	
IP address	202.0.0.240
Subnet mask	255.255.255.0

Table 15: PPP IP factory config

note: By default, the incoming PPP connection is allowed.

6.1 Resets

Warning: you should not reset your eWON unless you have been told to do so by someone of our technical support. The concerned files (differs depending on reset type) are totally lost and unrecoverable after being formatted.

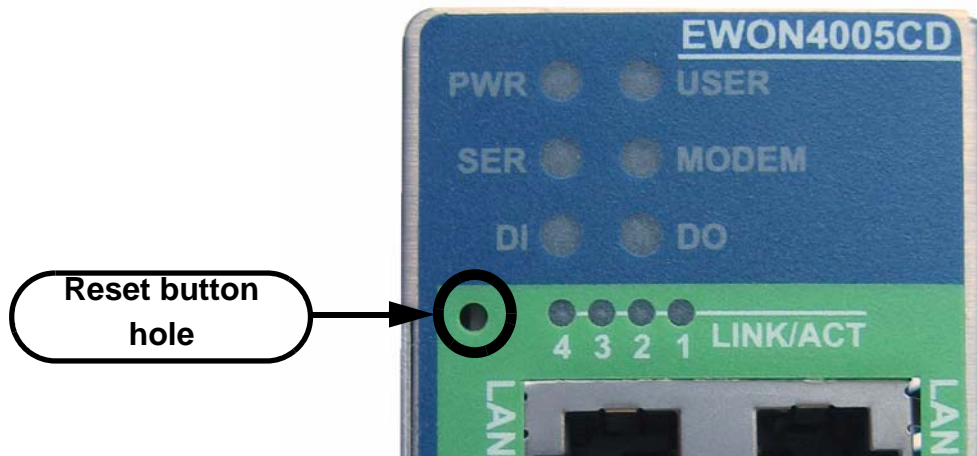

To press the reset button, you will need a propelling pencil or an unfold paper clip to pass through the hole in the front panel.

6.1.1 User Reset

This is the first level and most usual level of reset. It consists in formatting only the « user file » part of the non volatile memory. The Tag configuration and the customer web site are part of the formatted files.

You generate this first level reset by pressing and maintaining the reset button during approximately 4 seconds after powering the eWON up until the “USER” LED flashes in red 1x per second. When this state is reached, release the button and wait approximately 30 secs until the procedure is completed. The eWON restarts automatically and is ready to communicate. This type of reset does not modify the communication parameters.

6.1.2 Factory Reset

This second level reset is used only exceptionally because it formats all non volatile memories and make the eWON returning to its factory defaults. This operation consists in 3 stages:

- Formatting of all non volatile memories, including all COM parameters and IP addresses
- Return to ex-factory configuration (default config)
- Full hardware auto test with result shown by the “USER” LED

You generate this second level reset by pressing and maintaining the reset button during approximately 20 secs after powering up the eWON until the “USER” LED remains RED continuously. When this state is reached, release the button and wait approximately during 90 seconds until the procedure is completed. The procedure finishes with the result of the autotest on the “USER” LED. If the autotest is completed successfully, then the “USER” LED shows its normal pattern of 200ms ON et 1,5 sec OFF.

Any other pattern will start with 200ms ON (opening of the pattern) followed by OFF and a certain number of times 1 sec ON that allows to identify the nature of the detected problem. Please call the technical support if you are confronted with an error pattern on the “USER” LED.

Warning: you absolutely have to wait until the full autotest procedure is completed without interrupting it. If the autotest is interrupted, the flash memory of the eWON will contain random data likely to make it unstable. In such a case you have to redo the full reset procedure from scratch and wait until it is totally completed.

When performing a full reset, the eWON does NOT restart in normal mode by itself and remains running in diagnose mode. Power the eWON OFF and ON again to restart in normal mode. As described before, the eWON returns to its default COM parameters and IP addresses after this level 2 reset is performed.

7 Technical support

If you need technical support, simply fill out the form on the Web site <http://www.ewon.biz> or send an email with the problem description to support@ewon.biz.

You will also find usefull documentation at <http://support.ewon.biz>

8 Appendix: Pinouts and connections

8.1 Power Supply

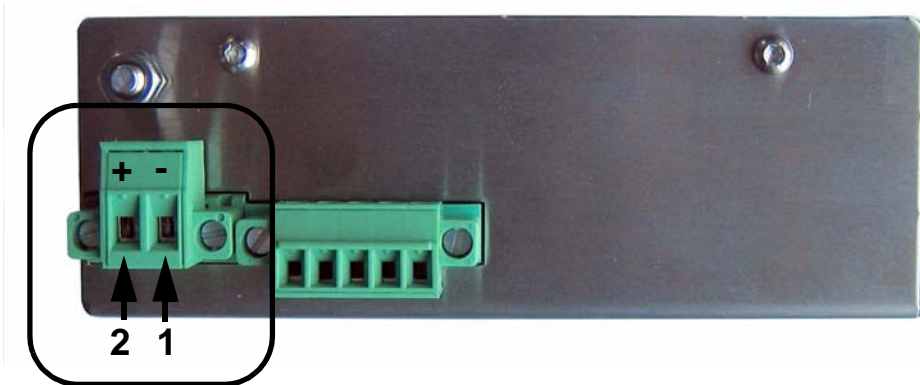


Figure 9: Power supply connector: eWON Mating female connector (included)

- **Manufacturer:**
Phoenix Contact GmbH, <http://www.phoenixcontact.com>
Part Number: GMSTB 2,5/2-STF-5.08
- **Pinout (see label)**

Pin	Description
1	Ground
2	Positive (+)

Table 16: Pinout Power Supply Connector

8.2 Ethernet


By default, only the LAN Ethernet interface of the eWON4005CD™ can be used to access the internal WebSite.

8.2.1 Ethernet LAN

The Ethernet LAN is a four ports autosense ethernet switch (10/100 Mb). Autosense means that you can use both direct and crossed cables.

color & activity	Meaning
off	No Link
green fixed	Link
green blink	Activity (RX or TX)

Table 17: Led meanings on Ethernet LAN

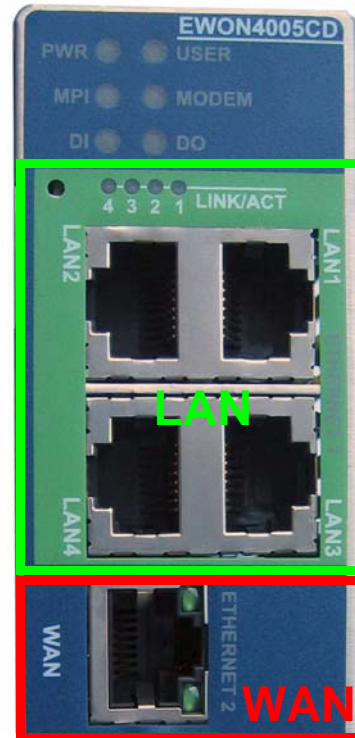

8.2.2 Ethernet WAN

The eWON can be accessed by a 10/100BaseTX Ethernet connection. This connection can be made with two different cables (straight or crossed). These cables have 8 copper conductors and are known as UTP Class 5 with RJ45 terminations at both ends.

The type of cable (straight or crossed) depends on the equipment the eWON will be connected to. The most current cases are the direct connection with a PC (crossed) and the connection through a hub/router (straight).

The WAN port have 2 leds showing the state and activity on the port.


	color & activity	Meaning
Upper Led	off	No Link
	green fixed	Link
Lower Led	green blink	Activity (RX or TX)

Table 18: Led meanings on Ethernet WAN

WARNING: By default, the WAN interface is disabled.

8.2.3 Direct connection

If the eWON is connected directly to a PC, then use the crossed cable:

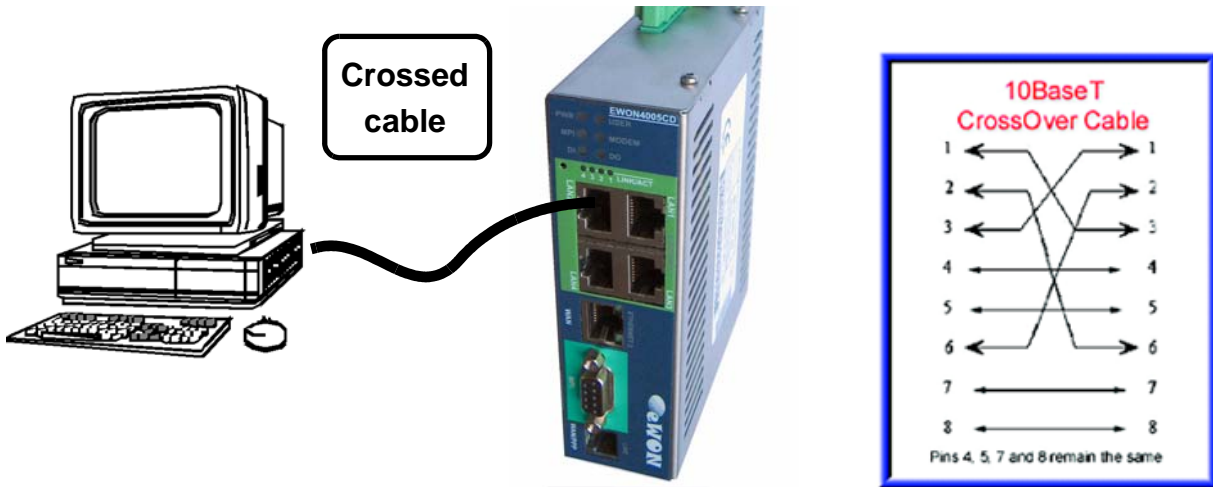


As the LAN interface is “autosense”, you can use a crossed or straight ethernet cable, but generally, a direct connection is done with a crossed cable.

The WAN interface is not “autosense”, then you must use a crossed ethernet cable to make a direct WAN connection.

When cabling over long distance, you have to take care of the twisted pairs. This means that along with the above cabling conventions, the emission (TX+/TX-) and reception (RX+/RX-) signals have to be connected on the same twisted pair:


TX+: pin3, TX-: pin6	Twisted pair 1
RX+: pin1, RX-: pin2	Twisted pair 2

Pins 4, 5, 7 and 8 do not have to be connected. The following picture shows the twisted pair connections:

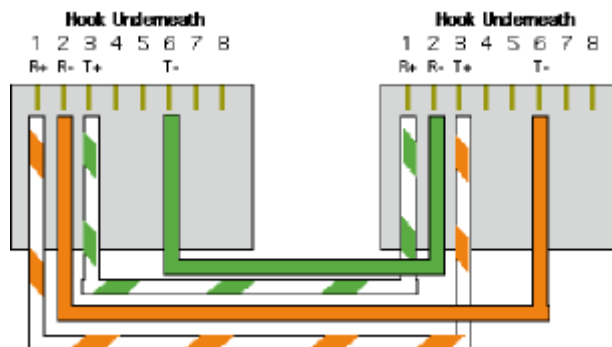



8.2.4 Connection over hub/router

If the eWON is connected to a hub, it has to be connected like any other device, with a straight cable. Again, the wiring is as shown on the following picture, and care should be taken to keep the RX and TX signals on twisted pairs:

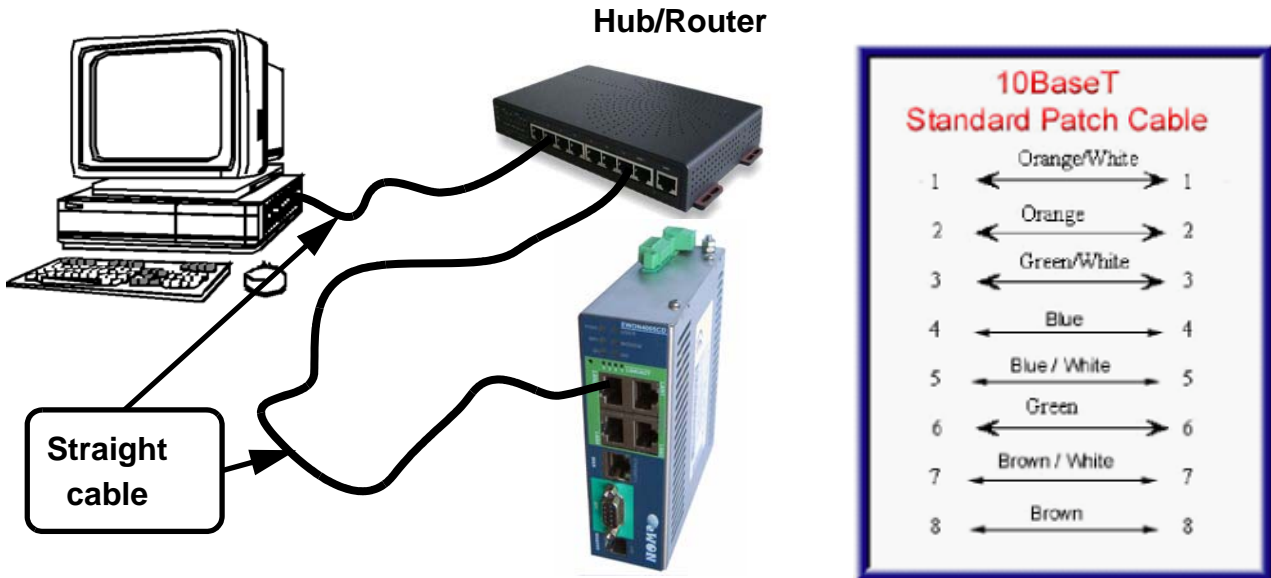


8.3 RJ45 connector

The RJ45 connector has got the following pins numbering, as it can be seen on the following picture, showing it from different angles:

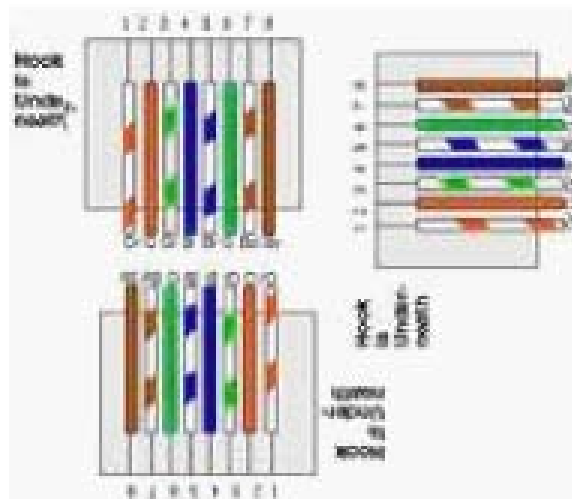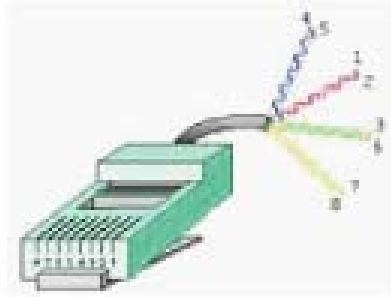

8.4 Input/Outputs

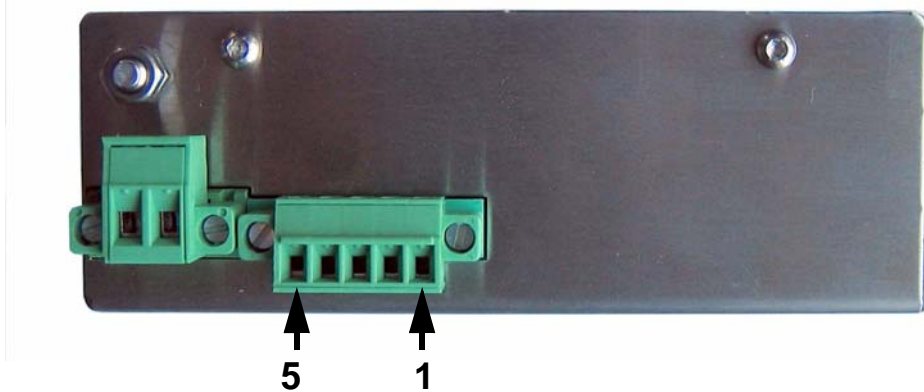

Mating female connector (included):

Manufacturer:	Sauro	http://www.sauro.net/
Part Number:	CTF050VT	

Pin	REF	Description
1	DO_GND	Output digital signal (0V ground) connected to the emitter of the transistor
2	DO	Output digital signal connected to the drain of the MOSFET transistor
3	DO_VDC	Common of the external predrive power supply (between +12 et +24 VDC)
4	DI_GND	Ground of the input (isolated)
5	DI	Input digital signal

Figure 10: Pinout I/O connector


8.5 Serial Port

Mating female connector (not included):



Type	Female DB9 with 4/40 blocking screws
-------------	--------------------------------------

 Pinout serial port (according to mode):



Pin	RS232	RS485	RS422
1	-	-	-
2	RXD	-	RX+
3	TXD	A+	TX+
4	-	-	-
5	GND	GND	GND
6	-	-	-
7	RTS	-	RX-
8	CTS	B-	TX-
9	-	-	-


Table 19: Pinout serial port

8.6 MPI port

Mating male connector (not included):


Type	Male DB9 with 4/40 blocking screws
-------------	------------------------------------

 MPI port pinout (DB9 female):



Pin	MPI
1	-
2	-
3	B(+)
4	-
5	GND
6	-
7	-
8	A(-)
9	-

Table 20: MPI port

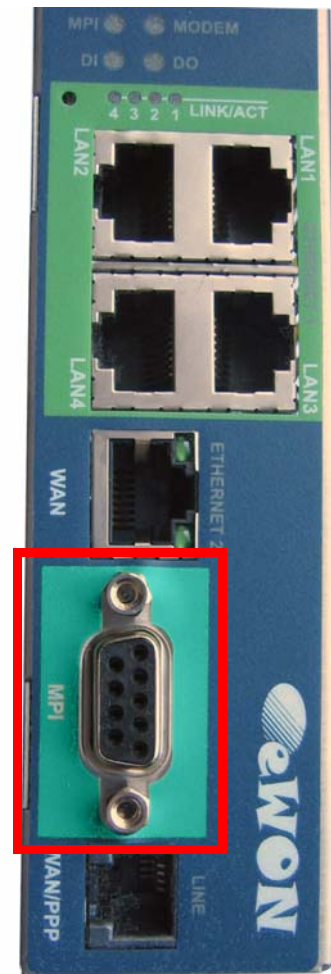

8.7 PSTN / ISDN phone line connector

- Mating male connector (not included):

Type:	RJ11 type "6P2C" without shield
--------------	---------------------------------

- Pinout PSTN line:

Pin	Description
1	-
2	-
3	TIP
4	RING
5	-
6	-

Table 21: pinout PSTN modem

- ISDN phone line mating male connector pinout (RJ11):

Pin	Description
1	-
2	TX+
3	RX+
4	RX-
5	TX-
6	-

Table 22: ISDN connector pinout

